
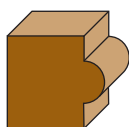


### FRESE HW SAGOMATE A MEZZO TONDO Z=2


ART. E115 - G115

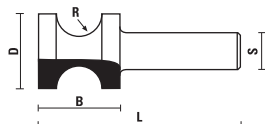

S Ø 12	S Ø 12,7 (1/2")	D	R	B	L
E115.220.R	G115.220.R	22	5	19	57
E115.260.R	G115.260.R	26	6,8	25	63
E115.280.R	G115.280.R	28	8	25	64
E115.333.R	G115.333.R	33,3	9,5	35	73
E115.429.R	G115.429.R	42,9	12,7	40	78
E115.510.R	G115.510.R	51	16	50	88
E115.600.R	G115.600.R - giri max 18.000	60	19	50	88

### FRESE HW PER GIUNZIONI PER CASSETTI Z=2



ART. E119 - G119

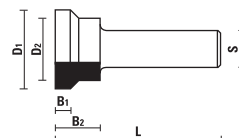

S Ø 12	S Ø 12,7 (1/2")	D1	D2	B1	B2	L
E119.254.R	G119.254.R	25,4	18,5	4	13	49

### FRESE HW SAGOMATE PER MANIGLIE Z=2




ART. E116 - G116

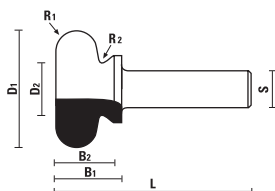

S Ø 12	S Ø 12,7 (1/2")	D1	D2	R1	R2	B1	B2	L
E116.190.R	G116.190.R	19	10	4,8	2,5	19	14	57
E116.381.R	G116.381.R	38,1	17	6	2	21	18	59
E116.445.R	G116.445.R	44,5	17	8	2	25	22	63

### FRESE HW PER GIUNZIONI A 90° Z=2



ART. E120 - G120

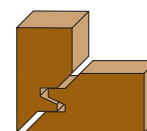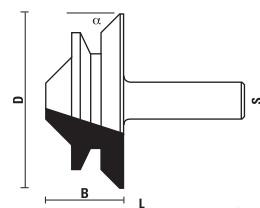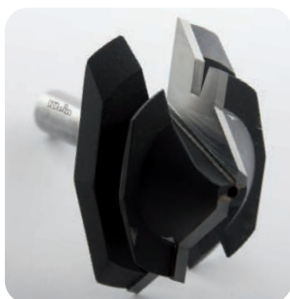

S Ø 12	S Ø 12,7 (1/2")	D	α	B	L
E120.445.R	G120.445.R	44,5	45°	20	58
E120.680.R	G120.680.R - giri max 18.000	68	45°	29,5	68

### FRESE HW SAGOMATE PER MANIGLIE Z=2



ART. E118 - G118

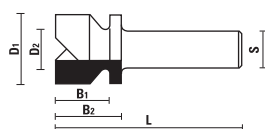

S Ø 12	S Ø 12,7 (1/2")	D1	D2	B1	B2	L
E118.220.R	G118.220.R	22	13	17	21	59

### FRESE HW PER GIUNZIONI Z=2

ART. E121 - G121

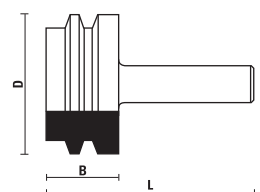

S Ø 12	S Ø 12,7 (1/2")	D	B	L
E121.470.R	G121.470.R	47	28	66