


PUNTE PER "ANUBA" HS Z=2

ART. R203




Attacco nominale

Rotaz. DX	D1	D2	B	B1	L	S	Anuba
R203.130.R	5,4	6,5	20	50	80	6,5	13
R203.131.R	5,7	6,75	20	65	105	6,75	13
R203.140.R	6	7	20	50	80	7	14
R203.141.R	6,25	7,25	25	60	90	7,25	14
R203.142.R	6,25	7,25	20	65	105	7,25	14
R203.160.R	6,5	7,75	25	60	90	7,75	16
R203.161.R	6,5	7,75	20	70	110	7,75	16
R203.180.R	6,7	8,5	25	60	90	8,5	18
R203.181.R	6,7	8,5	25	70	110	8,5	18

PUNTE HW/HS A TRE DIAMETRI PER "CONFIRMAT" Z=2

ART. R104 - R204


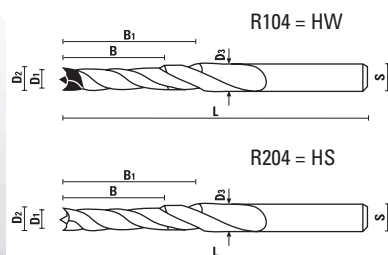


- Per il montaggio di giunti "Confirmat"
- R104 = con placchetta a forare in HW
- R204 = HS

Rotaz. DX	D1	D2	D3	B	B1	L	Mat.	S
R104.100.R	5,5	7,3	10	35	56	138	HW	10x50
R204.100.R	5,5	7,3	10	35	56	138	HS	10x50
R204.101.R	5,5	7,3	10	40	60	120	HS	10x40

PUNTE A TRE DIAMETRI REGOLABILI Z=2

ART. R108 - R209

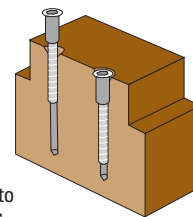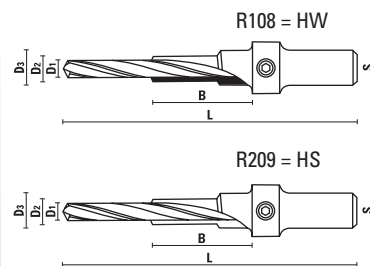

- Per il montaggio di viti di giunzione
- Punta di ricambio in HS speciali con gambo ribassato
- Per il montaggio di giunti "Confirmat", "Directa" etc..

Rotaz. Dx	D1	D2	D3	B	L	Mat.	S
R108.050.R	5	8,5	11,5	25	100	HW	10

Punta di ricambio D

R108.051.R	5
------------	---

Rotaz. Dx	D1	D2	D3	B	L	Mat.	S
R209.035.R NEW	3,5	5	8	24	90	HS	10
R209.044.R NEW	4,4	6,5	9,5	18	95	HS	10
R209.050.R NEW	5	7	10	26	100	HS	10

Punta di ricambio D


R209.036.R NEW	3,5
-----------------------	-----

R209.045.R NEW	4,4
-----------------------	-----


R209.051.R NEW	5
-----------------------	---

PUNTE PER "ANUBA" HS Z=2

ART. R208



Anuba 9:11 Unico diametro



Anuba 13:22 Doppio diametro

Per il montaggio di Anuba **SFS INTECK**

Rotaz. DX	D1	D2	B1	B	L	S	Anuba
R208.090.R		5,2	52		132	5,2	9
R208.110.R		5,7	57		139	5,7	11
R208.130.R	5,3	6,7	63	12	148	6,7	13
R208.140.R	5,8	7,2	69	13	156	7,2	14
R208.160.R	6,3	7,7	75	14	165	7,7	16
R208.180.R	7,2	8,6	81	14	175	8,6	18
R208.200.R	7,4	8,8	81	16	175	8,8	20
R208.220.R	8,8	10,2	87	23	184	10,2	22